

MEASURING INSTRUCTIONS



RYAN

Measuring Instructions for Eastern Overlap Windows

Width: Measure between inside edges of outside casing at three points: Head, meeting rail and sill. Furnish the least dimension.

Height: Measure from bottom of top casing to sill along the face of each side casing, so as to include the slope of the sill. Furnish the least dimension.

Drop Sill: If sill has drop of $\frac{3}{4}$ " (see drop sill illustration) specify drop sill height on your order and dictate whether drop sill has or has not been included in overall height.

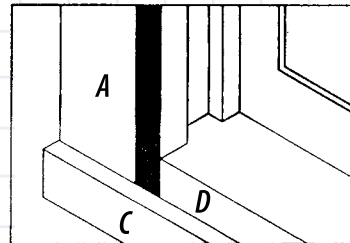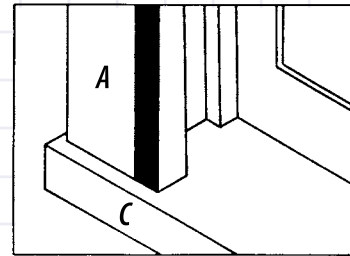

KEY
A: Side Casing
B: Blindstop
C: Parting Stop
D: Sill
E: Drop Sill



Shaded area indicates surface on which storm window is mounted.

Measuring Instructions for Western Blindstop Windows

Width: Measure between jambs at three points: top, middle and bottom. Use the smallest measurement.

Height: Measure from bottom of square edge of top casing to top of sill in front of each blindstop on the jambs. Furnish the least dimension.

Drop Sill: If sill has drop of $\frac{3}{4}$ " (see drop sill illustration), specify drop sill height on your order and dictate whether drop sill has or has not been included in overall height.

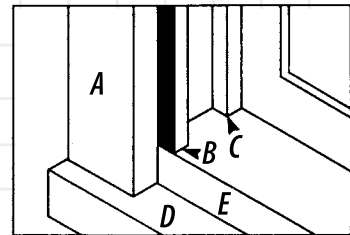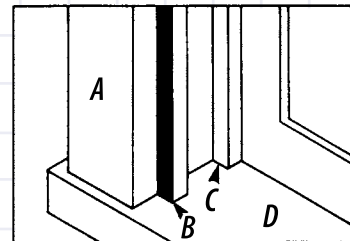

KEY
A: Side Casing
B: Blindstop
C: Parting Stop
D: Sill
E: Drop Sill

Shaded area indicates surface on which storm window is mounted.

